



Stahlbau/Structural sections

DE gemäß DIN1025 und EN10055, mit Tragprofilbreite von 100 - 180 mm
 UK in accordance with DIN1025 & EN10055, support profile width 100-180 mm

Montageanleitung – Klemmsatzführung F ohne Abhebesicherung

EN - Mounting instructions – Cramping set F without lift-off securing

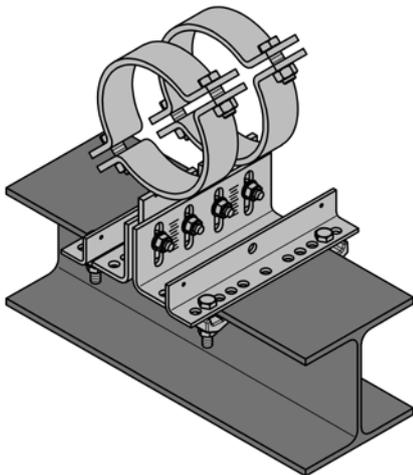

- DE 1 Klemmsatzführung auf dem Stahlprofil platzieren und parallel ausrichten (siehe **x**).
 2 Schrauben einstecken und Klemmsatzwinkel mit Spannpratzen, Muttern und Unterscheiben verschrauben.
 3 Rohrlager auf dem Stahlprofil zwischen der Klemmsatzführung platzieren und Klemmsatzführung beischieben.
 4 Spalt **z** zwischen Rohrlager und Klemmsatzführung einstellen (empf. beidseitig 2mm). Schrauben festziehen (Anzugsdrehmoment 25 Nm). Führungsspiel prüfen.
- EN 1 Place both parts of the cramping set on the steel profile and align them in parallel (see **x**).
 2 Insert screws and screw the cramping set with clamping claws, nuts and washers.
 3 Place the pipe shoe on the steel profile between the clamp set and move both parts of it close to the pipe shoe.
 4 Adjust the gap **z** between the pipe shoe and the cramping set (recommended 2 mm each side). Tighten screws (tightening torque 25 Nm). Check clearance.

